

RASKLR[®]

USER MANUAL

MULTIFUNCTIONAL STEAM CLEANER



TM-218 | WITH MOP VERSION



POWERFUL STEAM

Deep household cleaning



SAFETY LOCK

Controlled everyday use



NO CHEMICALS

Water-powered cleaning

Read all instructions before use and keep this manual for future reference.

CONTENTS

TM-218 | WITH MOP VERSION

1	Welcome & Product Introduction	3
2	Product Overview & Technical Data	4
3	What's in the Box	5
4	Mop Assembly	6
5	Connecting the Mop Set	7-8
6	Controls & Safety Lock	9
7	How to Use	10
8	Installing Accessories	11
9	Mop Operation, Cleaning & Safety	12
10	Refilling, Caution & Disposal	13
11	Prohibitions & Warnings	14
12	Frequently Asked Questions	15-16
13	Responsible Use & Disclaimer	17
14	Electrical Equipment & Disposal	18
15	12-Month Limited Warranty	19
16	Product & Compliance Information	20

TM-218

MULTIFUNCTIONAL STEAM CLEANER



WELCOME

Thank you for choosing the RASKLR TM-218. This high-quality household steam cleaner combines practical performance with an easy-to-use design. Before using the appliance, read this manual carefully and follow each operating and safety instruction.

READ ALL INSTRUCTIONS BEFORE USE



**EFFORTLESS
CLEANING**



**NO
CHEMICALS**



**HIGH-TEMP
STEAM**

 


**SAFETY
LOCK**

PRODUCT OVERVIEW

TM-218 MULTIFUNCTIONAL STEAM CLEANER

MAIN COMPONENTS

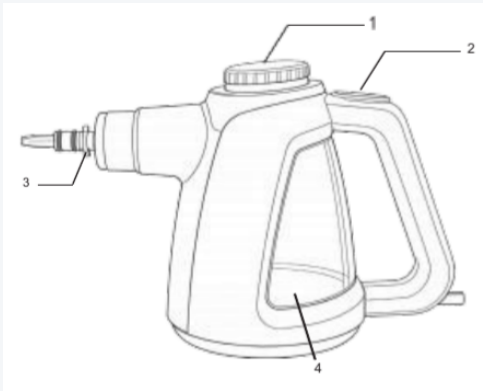

- 1 SAFETY CAP**
Open only when cool to fill water.
- 2 INDICATOR LIGHTS**
Flash while heating; steady when ready.
- 3 STEAM OUTLET**
Steam outlet and accessory connector.
- 4 WATER TANK**
Fill with clean water only.

TECHNICAL DATA

MODEL
TM-218

VOLTAGE
AC 220-240 V, 50/60 Hz

RATED POWER
1300 W

TOTAL TANK CAPACITY
750 ml

WORKING CAPACITY
650 ml

STEAM OUTPUT
40-45 g/min

THERMOSTAT
150 °C

FUSE
240 °C

Use only the approved 650 ml working capacity during operation.

WHAT'S IN THE BOX

TM-218 - WITH MOP VERSION



STEAM CLEANER UNIT x 1

TM-218 multifunctional steam cleaner

13 STANDARD ACCESSORIES - INCLUDED



Round nylon
brush x 2



Metal brush
x 2



Straight nozzle
x 1



Ironing brush
x 1



Window squeegee
x 1



Bent nozzle
x 1



Extension hose
x 1



Towel / ironing
brush cloth x 2



Measuring cup
x 1



Funnel
x 1

MOP KIT - INCLUDED WITH THIS VERSION



 
Mop stick
sections x 3



Mop floor head
x 1



Washable mop
cloth x 2

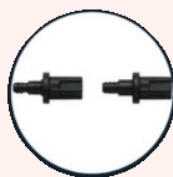

Connecting
attachments x 2

MOP ASSEMBLY

TM-218 WITH MOP - INCLUDED ONLY WITH THE MOP VERSION

Mop Accessories



Mop Stick Section ×3



Mop Floor Head ×1



Washable Mop Cloth ×2



Connecting Attachments ×2

ASSEMBLY

- 1 Unplug the cleaner, engage the Safety Lock and allow the unit and attachments to cool completely.
- 2 Fit the straight connecting attachment to the steam outlet. Push it fully into position and turn it until secure.
- 3 Fit the angled connecting attachment, then join all three mop stick sections firmly in sequence.
- 4 Connect the assembled mop stick to the mop floor head. Do not use the assembly if any joint is loose.
- 5 Place one clean, dry washable mop cloth flat on the underside of the floor head and fasten it securely.
- 6 Check every connection before plugging in. Keep hands away from the steam outlet while preheating.

BEFORE USE

- Fill with clean water only. Do not exceed the approved 650 ml working capacity.
- Refit and tighten the cap, then keep the cleaner upright during operation.
- Plug in and allow preheating to finish. The ready indicator must be steady before use.
- Hold the Safety Lock button for 3 seconds to unlock, then press the steam button once to start steam.

How to connect MOP sets

Step 1:

Align the adapter with the port as shown in the diagram.



Step 2:

Grasp the adapter and rotate it upward as shown.



Step 3:

Insert the mop handle into the adapter with the white button facing upward.



How to connect MOP sets

Step 4:

Align the interface of the larger rod with the front connector of the product. (Install the same accessory as used with the handheld steam cleaner)



Attention!!!

Larger rod's interface must be connected to the main body ; otherwise, it cannot be installed.



connect
→



CONTROLS & SAFETY LOCK


TM-218 CONTROL PANEL

1 POWER & READY INDICATOR

Both indicator lights flash during preheating.

After 20-30 seconds, the GREEN ready arrow flashes.


Press and hold for 3 seconds. The light stays on when the unit is ready.

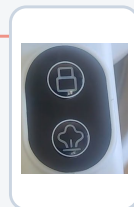

2 STEAM CONTROL

Press once: steam turns on and the indicator lights.


Press again: steam turns off and the indicator goes out.

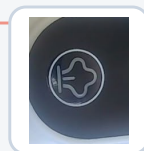

3 SAFETY LOCK

LOCK: Press and hold the Safety Lock for 3 seconds. The light flashes and the machine locks.

UNLOCK: Press and hold for 3 seconds. The light stays on when ready to use.

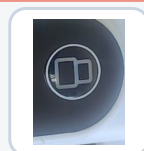

IMPORTANT SAFETY NOTES

- AUTO-LOCK: The unit locks automatically after 15 seconds of standby. Hold the Safety Lock for 3 seconds to unlock before use.
- FACTORY LOCK: After preheating, hold the Safety Lock for 3 seconds before first operation.

How to use

1 . Remove the safety cap



2 . Add max 650ml of water by using the provided measuring Cup.

(If over 650ml too much , will be easier overflowing)



3. Rotate in the opposite direction to close the lid. Align the white line on the lid with the lock mark on the unit to ensure it is tightly sealed.



4. connect the attachment as needed and ensure it is tightened.



5. Important At The site

The steam cleaner must not be tilted more than 45 degrees during use , otherwise water may leak out.



Installation of Accessories



SCALDING HAZARD

HOT STEAM CAN CAUSE SERIOUS BURNS

Keep hands and skin away from the steam outlet and heated accessories during and after use.

MOP OPERATION, CLEANING & SAFETY

FOR TM-218 WITH MOP

USING THE MOP

- Sweep or vacuum loose dirt before steam cleaning.
- Use only on sealed, heat-resistant hard floors approved for steam cleaning. Test a hidden area first.
- Keep the cleaner upright and never tilt it more than 45 degrees.
- Press the steam button once to start. Keep the mop head moving in smooth passes.
- Do not hold the steaming mop in one place. Stop immediately if the floor finish changes.
- Press the steam button again to stop. Floors can remain hot, wet and slippery after use.

AFTER USE & CLEANING

- Stop steam, engage the Safety Lock and unplug the appliance.
- Allow the unit, floor head and cloth to cool completely before handling or disassembly.
- Remove the cloth and wash it with mild detergent. Do not use bleach or fabric softener. Air dry fully.
- Wipe the mop head, sticks and connectors with a damp cloth. Do not immerse the main unit.
- Release residual pressure and follow the refill and draining instructions in this manual.
- Store all parts clean and dry. Replace a worn or damaged cloth before the next use.

MOP SAFETY - READ BEFORE USE

- Use only the supplied mop kit and confirm every connection is secure.
- Never touch the hot floor head or cloth. Change attachments only when unplugged, cool and depressurised.
- Never direct steam at people, animals or equipment containing electrical components.
- Do not open the filling cap during use and do not exceed 650 ml.
- Use clean water only. Never add detergent, alcohol, descaler, fragrance or other chemicals.
- Do not use on unsealed wood, waxed floors or surfaces that are not heat resistant.
- Keep children and pets away from the work area until the floor is cool and dry.
- If steam leaks from a connection, stop, lock, unplug and allow the appliance to cool before checking it.

REFILLING, CAUTION & DISPOSAL

TM-218 MULTIFUNCTIONAL STEAM CLEANER

SAFE REFILLING

1

STOP STEAM

Press the steam button once to stop the steam flow.

2

UNPLUG AND COOL

Switch off, unplug and allow the appliance to cool completely.

3

REFILL CAREFULLY

Open the cap only when cool. Add clean water and do not exceed the 650 ml working capacity.

CAUTION



SUPERVISION REQUIRED

This appliance is not intended for persons, including children, with reduced physical, sensory or mental capabilities, or limited experience and knowledge, unless supervised or instructed by a responsible person.



KEEP CHILDREN SAFE

Children must be supervised so they do not play with the appliance. Never open the filling aperture during use.



STEAM HAZARD

Never direct steam towards people, animals, electrical equipment or electrical components.

CORRECT DISPOSAL



DO NOT DISPOSE WITH HOUSEHOLD WASTE

This symbol means the product must be collected separately from household waste. To protect the environment and human health, recycle it responsibly through an approved electrical-waste collection or return scheme.

Follow the local disposal rules for electrical products.

PROHIBITIONS & WARNINGS

READ BEFORE USE

PROHIBITED

-  Do not allow children to use the appliance independently or remain nearby unattended.
-  Do not immerse the power cord or plug in water or any other liquid.
-  This product is for household use only and must not be used for industrial applications.
-  Do not switch on the power until the tank has been filled with water.
-  During use, keep the cleaner upright and never tilt it more than 45 degrees.
-  Do not open the filling aperture while the appliance is in use.
-  Do not direct steam towards people, animals or electrical products.
-  Add clean water only. Do not add rust remover, deodorizer, alcohol, detergent or chemicals.
-  Do not use the appliance in swimming pools containing water.

WARNING

-  Keep the power cord and plug in good condition. Do not use damaged cords or plugs.
-  Ensure the power supply matches the product requirements.
-  Keep the tank lid securely closed and the safety cap tightened during operation.
-  Unplug before refilling, cleaning or performing repairs.
-  Use a socket with a dedicated earth connection.
-  A damaged power cord must be replaced by the manufacturer or a qualified service agent.
-  Always unplug the appliance after use and before cleaning or maintenance.
-  Do not direct liquid or steam towards equipment containing electrical components, such as oven interiors.

FREQUENTLY ASKED QUESTIONS

OPERATION & TROUBLESHOOTING

TM-218 With Mop version - always follow the safety instructions in this manual.

Q1

What water should I use?

Use clean water only. In hard-water areas, distilled or demineralised water may reduce mineral build-up. Never add detergent, fragrance or chemicals.

Q2

How much water can I add?

Do not exceed the 650 ml working capacity. Fill only when the cleaner is unplugged, fully cool and depressurised, then close the safety cap securely.

Q3

Why is the cleaner not producing steam?

Check the water level, safety cap, plug and power. Allow the unit to heat. If steam still does not start, switch off, unplug and let it cool before checking again.

Q4

Why does the steam weaken or stop?

The water may be low or the cleaner may be reheating. Stop, unplug and allow it to cool fully before checking. Never refill a hot or pressurised cleaner.

Q5

Is a little water from the nozzle normal?

A small amount of condensation can appear when steam first starts. Point the nozzle safely into a sink or cloth until the steam flow becomes steady.

Q6

Why are there water droplets or water marks when an accessory is connected?

Hot steam can condense when it meets a cool accessory or surface. Brushes, nozzles, ironing tools and the window squeegee may release a small amount of condensed water at start-up. Do not exceed the 650 ml working capacity. Point the tool safely into a sink or cloth and run steam briefly until the flow is steady.

1



Brushes & nozzle

2



Ironing tool

3



Window tool

FREQUENTLY ASKED QUESTIONS

MOP OPERATION & CARE

TM-218 With Mop version - always follow the safety instructions in this manual.

Q7

How do I assemble the mop set?

Fit the adapter to the floor head and rotate it upward. Insert the rod sections with the buttons aligned, then connect the larger rod to the cleaner until secure.

Q8

Which floors can I steam mop?

Use only on sealed hard floors approved for steam cleaning. Check the flooring instructions and test a hidden area. Avoid unsealed, waxed or heat-sensitive floors.

Q9

Must the mop cloth be fitted during use?

Yes. Fit a clean cloth flat and securely before producing steam. Do not use the floor head directly on the floor without the cloth.

Q10

Why is the floor becoming too wet?

Keep the mop moving, avoid unnecessary steam and check that the cloth is secure and not saturated. Stop and replace or dry the cloth when needed.

Q11

How should I clean and store the mop parts?

Unplug and cool fully before removing the cloth or attachments. Wash the cloth according to its care label, let all parts dry and store the set clean and dry.

RESPONSIBLE USE & DISCLAIMER

TM-218 MULTIFUNCTIONAL STEAM CLEANER



Read and follow the complete manual before use.

Use the TM-218 only for household steam-cleaning tasks and only in a dry, well-ventilated operating area with a suitable earthed mains supply.

1

NO UNAUTHORISED REPAIR OR MODIFICATION

Do not dismantle, modify or repair the appliance yourself. If the cleaner, plug or power cord is damaged, stop using it and contact the retailer or a qualified service technician.

2

KEEP AWAY FROM HEAT AND FLAMES

Do not use or store the cleaner near naked flames, hot surfaces, explosive atmospheres or other sources of ignition. Never operate it in an environment outside the conditions described in this manual.

3

USE ONLY AS INSTRUCTED

Fill only with clean water, keep the unit upright, use the approved accessories and observe the 650 ml working capacity. Never add detergent, fragrance, descaler, alcohol or other chemicals to the tank.

4

PREVENT ELECTRIC SHOCK AND SCALDING

Do not immerse the appliance, cord or plug. Never direct steam at people, animals or electrical equipment. Unplug and allow the unit to cool fully before opening the safety cap, refilling, cleaning or changing accessories.

5

USER RESPONSIBILITY

Damage or injury caused by misuse, failure to follow this manual, unauthorised repair, unsuitable accessories or operation outside the stated conditions may not be covered by the commercial warranty.

IMPORTANT LEGAL NOTICE

Nothing in this manual excludes or limits liability where it would be unlawful to do so. The 12-month commercial warranty is additional to the consumer's statutory rights.

ELECTRICAL EQUIPMENT & DISPOSAL

INFORMATION FOR PRIVATE END USERS



WEEE SYMBOL

Separate electrical collection

Do not dispose of this appliance with unsorted household waste.

The crossed-out wheeled-bin symbol identifies electrical equipment that must be collected separately for reuse or recycling. Separate collection helps prevent harm to human health and the environment and allows valuable materials to be recovered.

1 PREPARE THE TM-218 FOR DISPOSAL

Switch off and unplug the appliance. Allow it to cool completely, release any residual pressure safely and empty the water tank. Do not dismantle the appliance. Keep the plug and power cord attached unless instructed otherwise by an authorised recycling facility.

2 USE AN APPROVED COLLECTION ROUTE

Take the appliance to an authorised electrical-waste collection point or household recycling centre. Where applicable, ask the retailer about free take-back when purchasing replacement electrical equipment. Follow the rules provided by your local authority.

3 PRODUCT-SPECIFIC INFORMATION

The TM-218 is a mains-powered steam cleaner and contains no user-replaceable battery. The battery-removal and personal-data deletion instructions sometimes supplied for electronic products do not apply to this appliance. Recycle removable accessories in accordance with local material-specific guidance.

For local collection options, contact your council, recycling centre or retailer.

12-MONTH LIMITED WARRANTY

TM-218 - MANUFACTURING DEFECTS

12 MONTHS

from the original retail purchase date

COVER: Manufacturing defects in materials or workmanship in the TM-218 appliance during normal household use.

WHAT IS COVERED

Subject to inspection, this warranty covers a fault caused by a manufacturing defect in the TM-218 appliance. If a valid claim is accepted, LARA GLOBAL LIMITED (RASKLR) may repair or replace the appliance with the same or an equivalent model, subject to availability.

Accessories are not covered.

WHAT IS NOT COVERED

All accessories are excluded, including brushes, nozzles, extension hose, ironing brush, window squeegee, towel sleeves or cloths, measuring cup, funnel, mop sticks, mop head, mop cloths and connecting attachments. Also excluded: misuse, accident, neglect, commercial use, chemicals or water additives, limescale, normal wear, external damage, and unauthorised repair or modification.

WARRANTY REGISTRATION

Scan the QR code to register your product and activate the **12-month limited warranty**.

Keep your order number or proof of purchase available when registering.

Customer Support Team
support@rasklr.com

SCAN TO REGISTER



HOW TO MAKE A CLAIM

- ✓ Stop using the appliance if it is unsafe or further use could cause damage.
- ✓ Keep proof of purchase and record model TM-218 and the purchase date.
- ✓ Contact the retailer or the Customer Support Team at support@rasklr.com.

YOUR STATUTORY RIGHTS ARE NOT AFFECTED

This commercial warranty is additional to the consumer's legal rights for faulty goods, which may provide remedies beyond the 12-month period.

THANK YOU

FOR CHOOSING RASKLR

Keep this manual and proof of purchase for future reference.

UK IMPORTER

LARA GLOBAL LIMITED
57 Gabrielle House
332-336 Perth Road
Ilford, England, IG2 6FF
Company No. 16209340
Customer Support Team:
support@rasklr.com

MANUFACTURER

Ningbo Maye Electric Appliance Technology
Co., Ltd.
East Zone Development Zone
Linshan Town, Yuyao City
Zhejiang, P.R. China

Product origin: Made in China

PRODUCT SPECIFICATIONS

MODEL

TM-218

RATED POWER

1300 W

STEAM OUTPUT

40-45 g/min

THERMAL FUSE

240 C

RATED VOLTAGE

AC 220-240 V, 50/60 Hz

TANK CAPACITY

750 ml total / 650 ml working

THERMOSTAT

150 C

USE

Indoor household use only



RASKLR®